

How To Find Your SLC

 
In Ocularis 5, there are two SLCs: one for Ocularis Base and one for the Recording Component.

To locate the SLC for Ocularis Base


There are a few ways to do this.

Option #1 - If you have access to the Ocularis Base computer

1.) On the computer where Ocularis Base is located, launch the *Ocularis License Activation* Application using the desktop icon.




2.) The following screen appears:

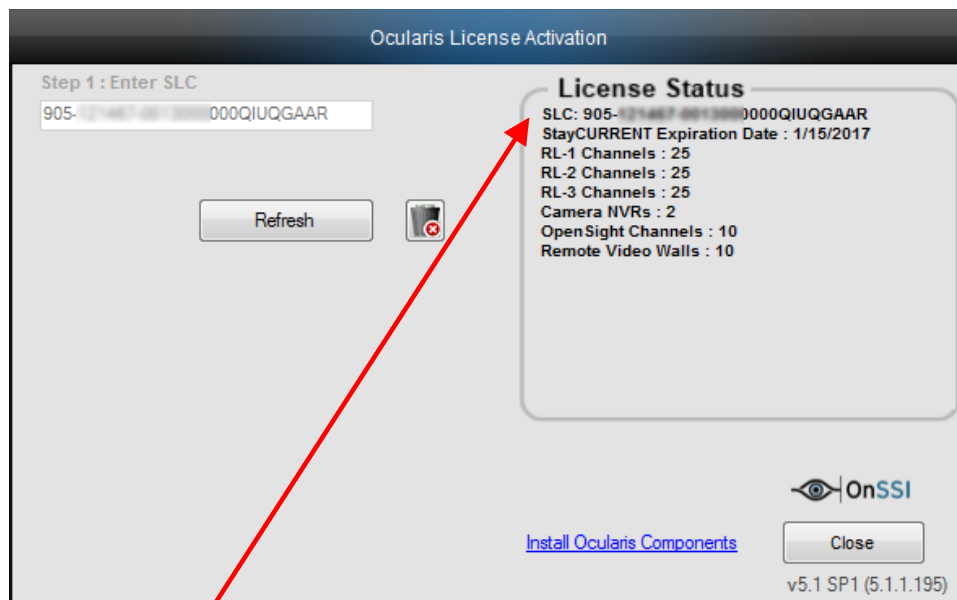


The Ocularis SLC is listed here.

Option #2 - If you do not have access to the Ocularis Base computer

 1.) On a computer with *Ocularis Administrator* installed, open the application and log into the Base.



2.) Click the *About* Tab. Then *License Information*.

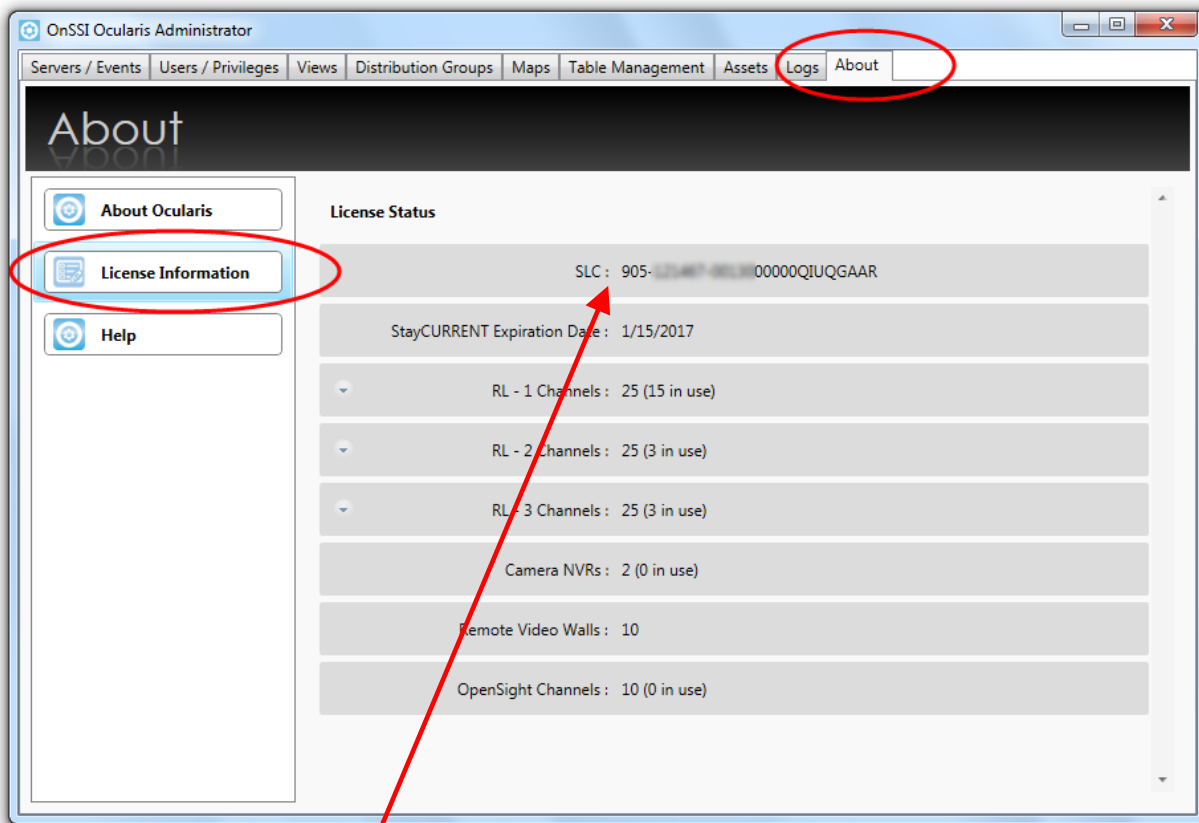


3.) The Ocularis SLC is shown here.

To locate the SLC for an Ocularis 5 Recording Component

1.) Use the *Ocularis Recorder Manager* to log into the Master Core.



2.) Select the *Info* menu...*Show Program Information*

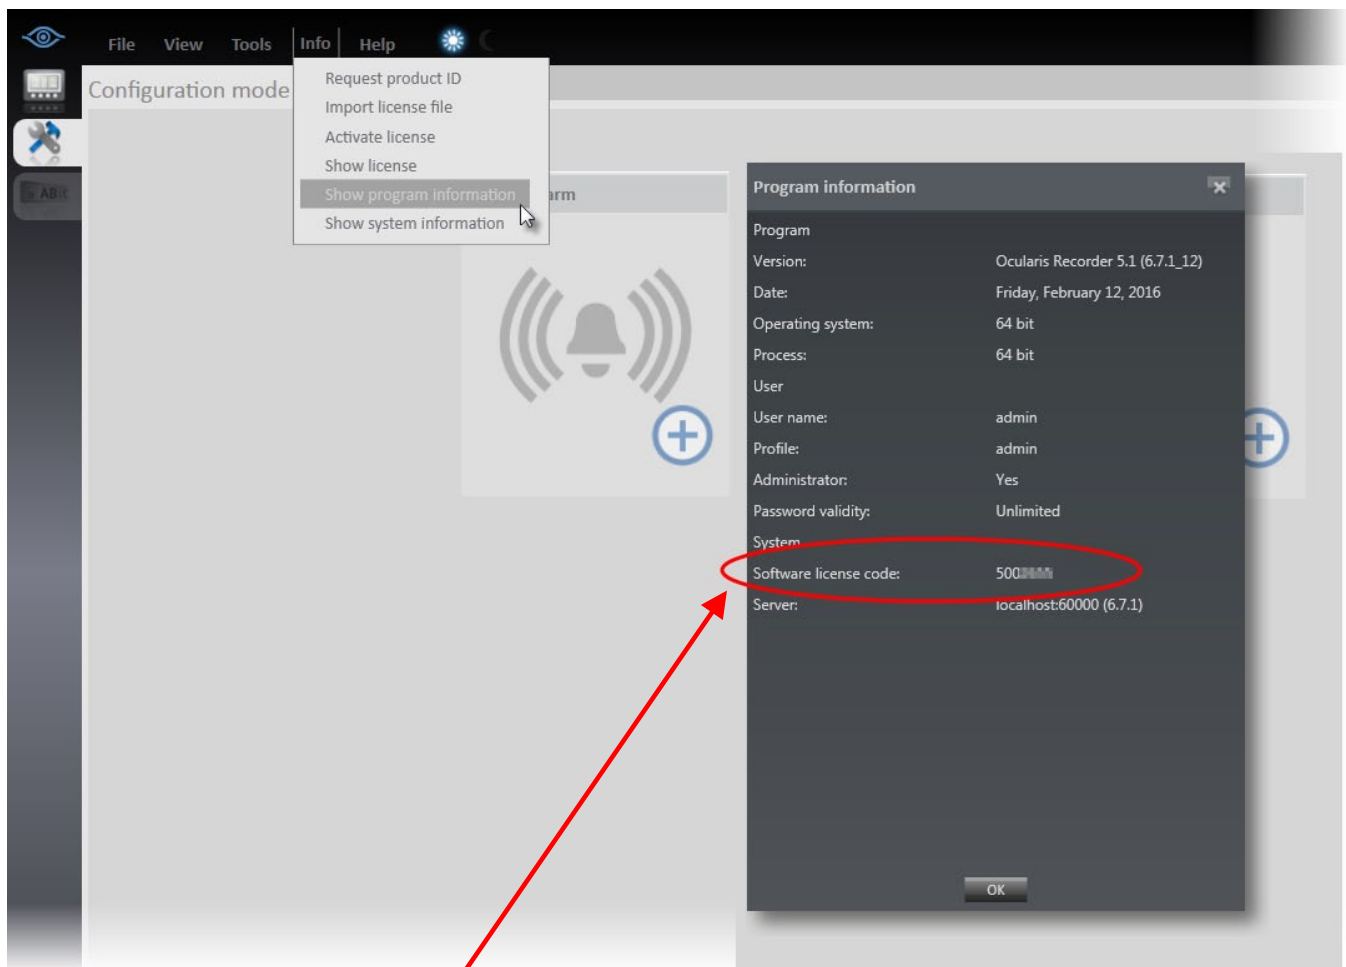

3.) The recorder SLC is shown here.